


SYSTEM SETUP

PTT Palm Spk/Mic Accessory

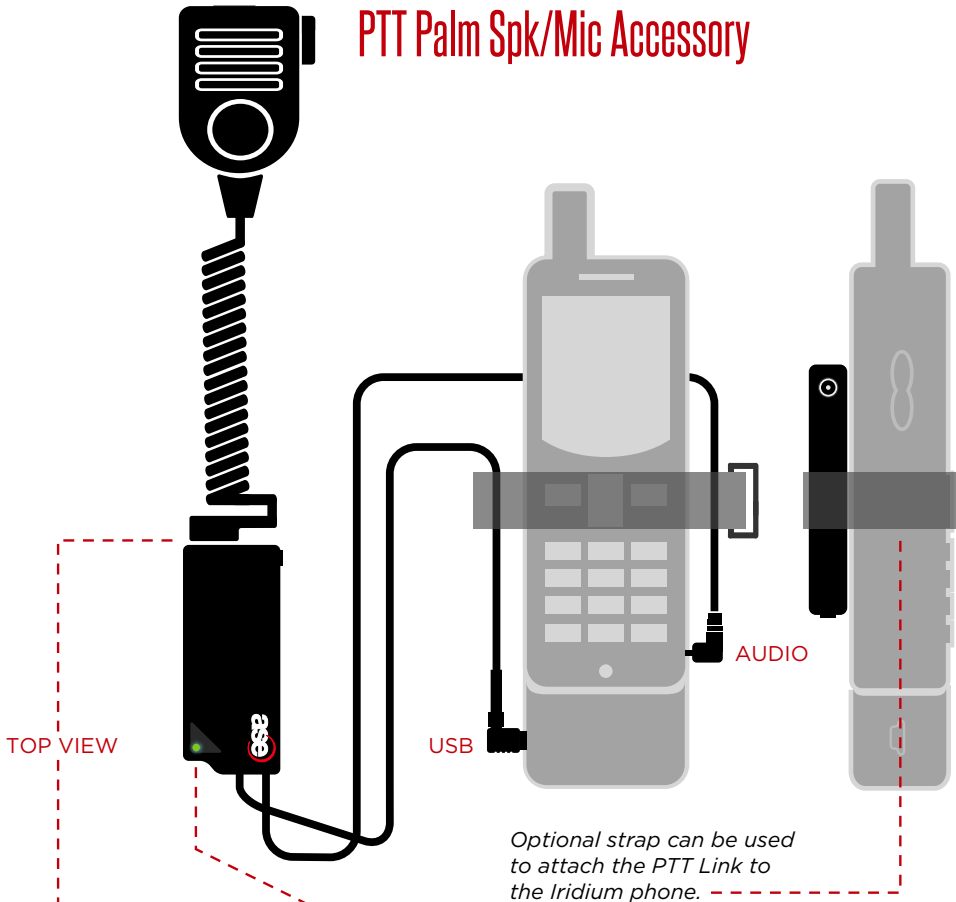

BATTERY STATUS INDICATOR

- status indicator will activate with every button press

- = CHARGED
- = BATTERY LOW
- ☀ CONTINUOUS BLINK = TOO LOW FOR OPERATION


PALM MIC (S2 TYPE)

CHARGING PORT (on side)

NOTE: PTT Link uses the Iridium phone charger. Charge every 40 Hours of use!


QUICK START GUIDE

1 ACTIVATION

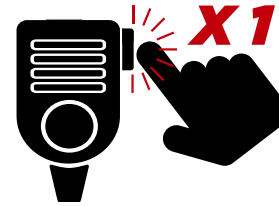

Single button press and hold will wake unit and activate communication with Iridium phone for a talk request.

2 AUDIO LEVEL CHANGE

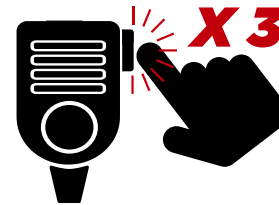

Three rapid button presses will toggle the PTT Link unit into a louder Palm Mic audio state. Three additional rapid button presses will toggle the unit back to standard audio levels. Audio level will reset every time the unit is deactivated.


☀ **X3** = LOUDER AUDIO LEVEL

☀ **X3** = STANDARD AUDIO LEVEL


3 UNIT DEACTIVATION

* IMPORTANT

The phone and PTT Link will continue to be active and use battery until the PTT Link unit is deactivated.

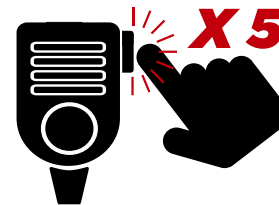

Five rapid button presses will deactivate the PTT Link unit. If the Iridium phone is in a 'power down' state the phone will also be deactivated

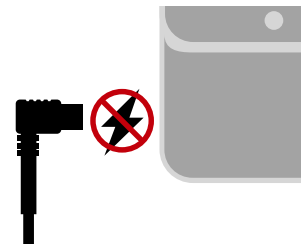

Unplugging the USB will deactivate both the PTT Link unit and the Iridium phone if the phone is in a 'power down' state.

BE PREPARED. STAY CONNECTED.