

Turning On / Off Your Phone

1. To turn on, press and hold down the red key until the screen lights up. The Inmarsat logo will appear followed by the main screen. To turn off, press and hold the red key until the screen light turns off.
2. Stand outside and be at the best clear of the sky. No trees or buildings obstructing the view.
3. Searching satellite will appear on the screen. When your phone is connected to the satellite, the screen will display "Ready for service".

Calling From The Satellite Phone

- To call a landline or cell phone : dial **00 > country code > area code > phone number**
For example : 0019419551020 (USA/Canada country code is 1 - Do not include dashes or spaces)
- To call a satellite phone to a satellite phone : dial **00 > satellite phone number**
For example : 00870712345678 (Do not include dashes or spaces)

Calling To The Satellite Phone

- To call the satellite phone directly from a landline/cell phone : dial **011 > Satellite phone number**
For example : 011870712345678 (USA/Canada based callers - Do not include dashes or spaces)
- For international callers: dial **00 > satellite phone number**
For example : 00870712345678 (Do not include dashes or spaces)
- To use 2-stage dialing :
 1. Dial 1(240)841-2500
 2. Wait for the voice prompt, then enter the 12 digit satellite number
 3. The system will then re-route the call for you.

Answering A Call

1. When your phone rings, press the green key. Remember, to receive a call, you must be connected to the satellite with the phone antenna pointing upwards.

Using Voicemail

1. If you have a new voicemail, the voicemail icon will appear in the status bar at the top of the main screen. You can press and hold the "1" key for a few seconds. You will then automatically be connected to your voicemail account.

Sending A Text From The Satellite Phone

1. Select **"Menu" > "Messaging" > "New Messaging" > "Text Message"**. Type your message (maximum 160 characters). Make sure to use the format **00 > Country Code > Area Code > Phone Number**.
For example: 00 1 941 955 1020 (No dashes or spaces)

Creating A Text Message For Sending To An Email Address

1. Select **"Menu" > "Messaging" > "New Message" > "Email message"**
2. Instead of displaying your name to the recipient, the message will display your details in the following format, From : your phone number@message.inmarsat.com. *For example : 870776456960@message.inmarsat.com*

Sending A Text To The Satellite Phone

- Send an email to the satellite phone number @message.inmarsat.com.
For example: 870712345678@message.inmarsat.com (maximum 160 characters, including the email address)

Using The Online Message Portal To Send Messages

Go to www.inmarsat.com/sms

Bluetooth

1. To activate Bluetooth connectivity select **Menu > Settings > Bluetooth**. Select **Settings > Bluetooth** and select **On**. The Bluetooth icon indicator appears in the status bar.

Inmarsat IsatPhone 2 Quick Guide

*****PLEASE RETURN BOOKLET
WITH YOUR RENTAL TO
OUR OFFICE AFTER USE*****

RETURN YOUR RENTAL :

Satellite Phone Store
Attn: Rental Returns

Florida Office
1414 S. Tamiami Trail
Sarasota, FL 34239 USA

Alaska Office
1231 West Northern Lights Blvd, Ste. 202
Anchorage, Alaska 99503 USA

California Office
2830 Shelter Island Dr.
San Diego, CA 92106



Usage example

**Antennas are fragile.
Please handle with care.**



Thank you for choosing [SatellitePhoneStore.com/!](http://SatellitePhoneStore.com/)

Please note that you MUST make a test call, +870.776.999.999, on your phone before leaving on your trip!

