Please note that you MUST make a test call, 1.480.752.5105, on your phone before leaving on your trip!



RETURN YOUR RENTAL Satellite Phone Store Attn: Rental Returns

4 LOCATIONS WORLDWIDE



Thank you for choosing Satellite Phone Store!



Iridium 9505A

HOW TO USE YOUR SATELLITE PHONE

QUICK GUIDE



Power the phone on/off

Press and hold the power button, located below the keypad, until the light on the screen turns on.

 
**The screen will display a short animated sequence that reminds you to rotate and extend the antenna, and shows how to hold the phone for the best reception.



Looking for signal

Nearby obstructions such as tall buildings, trees or mountains, can prevent calls.

- 1. Go outside to an area with a clear view of the sky
- 2. Fully extend the antenna upwards
- 3. The phone will search for a signal. It may take a few minutes.



The phone will search for a signal. It may take a few minutes. Once the screen says **"Registered"** you're ready to make and receive calls.



Calling From The Satellite Phone

To call a landline/cell phone, dial: 00 > Country Code > Area Code > Phone Number

For example: 001 941 955 1020 (Do not include dashes or spaces)

CALLING TO THE SATELLITE PHONE

Calling the sat phone directly from a landline/ cell phone

Dial : 011 > Satellite Phone Number

For example : 011 8816 1234 5678 (Non US/Canada-based phones should use the international dialing prefix 00 instead of 011)

Calling a sat phone directly is free for the sat phone user but VERY expensive for the caller, who may be billed up to \$12/min.

Calling the sat phone using the 2-stage service

Dial : 1(480)768-2500 or 1(240)841-2500, wait for the voice prompt, enter the 12-digit satellite phone number. The system will connect the call for you.

Using the 2-stage service, the caller will only be charged for a standard US call and the minutes will be debited from the sat phone's plan.

CHECKING VOICEMAIL

There are 2 options from the Messages menu :

- 1. Press 🖾 to go directly to the Messages menu.
- 2. Press MENU until you see Messages and then press

OK,

Follow the steps from the options to get to "Call Voicemail". Press of to select. You will see your voicemail number followed by **Calling**.



Sending a Text Message from the Satellite Phone

1. Press 🔄. Scroll to get to the Message Editor and then press or to select.

2. The cursor is placed in the upper left corner of the editing area.

If they're previous messages, the message editor displays the contents of the last message entered. Press and hold to clear the entire message editor content, if necessary.

3. Begin composing your message. Enter a letter by pressing a key as many times as necessary to chose the letters.

Sending a Text Message to an Email Address

Follow the same steps as **"Sending a Text Message from the Satellite Phone"**

Compose your message, starting with the destination email address, followed by a space, and then your message.

For example : johndoe@domain.com. (The maximum length of the entire message is 160.)