



IRIDIUM 9575 : OVERVIEW

Your Iridium Extreme is equipped with a dedicated SOS button which you may use to obtain emergency assistance anywhere in the world through Travel Safety Group Limited (GEOS).

Registration is required online at : geosalliance.com/iridium

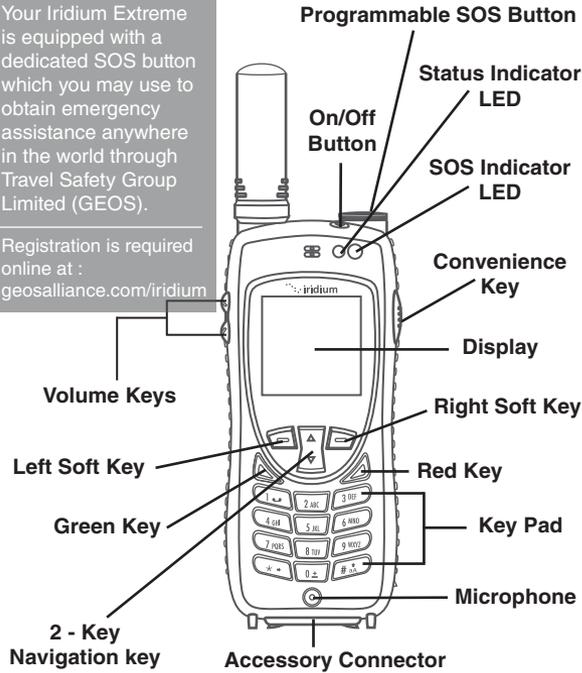

IRIDIUM 9555 : OVERVIEW

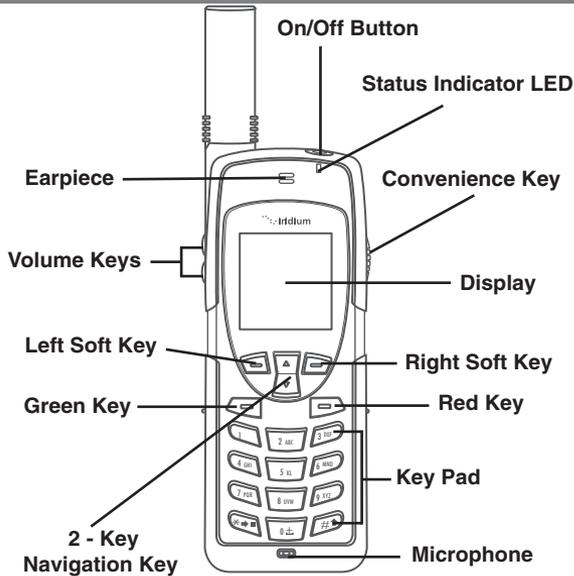

RETURN YOUR RENTAL
Satellite Phone Store
Attn: Rental Returns

4 LOCATIONS WORLDWIDE

**Satellite Phone Store
Alaska**
751 E 36th Ave #105
Anchorage, AK 99503

**Satellite Phone Store
California**
2830 Shelter Island Dr.
San Diego, CA 92106

**Satellite Phone Store
Ensenada**
Calle Riveroll #885
Local C Zona Centro, Ensenada B.C.

**Satellite Phone Store
Florida**
7430 N Tamiami Trail
Sarasota, FL 34243

*Thank you for choosing
Satellite Phone Store!*



Satellite
PhoneStore.com
1.877.943.6383

**Iridium 9575
&
Iridium 9555**


**HOW TO USE YOUR
SATELLITE PHONE**

QUICK GUIDE

▶ GETTING STARTED

1. Go outside to an area that has a full view of the sky.

NO TREES OR BUILDINGS OBSTRUCTING THE VIEW.

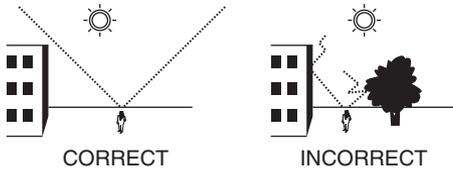

2. Fully extend the antenna on the phone. **Press and hold down the power button** on top until the phone turns on.

3. The phone will search for a signal. Once the screen displays **“Registered”** you are ready to make and receive calls.

**You MUST make a test call
before leaving for your trip!**

Free test number : 0014807525105

▶ CALLING FROM YOUR SATELLITE PHONE

To call a landline or cell phone :

Dial **00 > Country code > Area code > Phone number**

For example : 0019419551020

(USA/Canada country code is 1 - Do not include dashes or spaces)

To call a satellite phone to a satellite phone :

Dial **00 > Satellite phone number**

For example : 00881612345678

(Do not include dashes or spaces)

To call the satellite phone from a landline/cell phone :

Dial **011 > Satellite phone number**

For example : 011881612345678

(USA / Canada based callers - Do not include dashes or spaces)

For international callers :

Dial **00 > Satellite phone number**

For example : 00881612345678

(Do not include dashes or spaces)

To use 2-stage dialing (post-paid plans only) :

1. Dial 480-768-2500

2. Wait for the voice prompt, then enter the 12-digit satellite number

3. The system will then re-route the call for you.

▶ SETTING UP VOICEMAIL

Select **“Menu” > “Voicemail” > “Call Voicemail”** (this will automatically call the Iridium voicemail number, +881662990000).

- Wait for the voice prompt asking you to “re-enter the Iridium phone number you are trying reach”. Enter your Iridium phone number (*For example : 881612345678*). You will then be forwarded to your personal voicemail greeting.

- Press the *** key** to interrupt the greeting, and enter your password (last 7 digits of your Iridium number, see below) to access your personal mailbox.

- Follow the voice prompts for menu options.

By default, your voicemail password is the last 7 digits of your Iridium phone number. For security reasons, please change it using menu options.

▶ CHECKING VOICEMAIL

1. Select **“Menu” > “Voicemail” > “Call Voicemail”** through the phone’s onscreen menu.

2. Enter your 12-digit satellite phone number when prompted.

3. When you hear the greeting, “You have reached mailbox....”, interrupt this by pressing the star key (*****).

4. Enter your voicemail password. The default password is the last 7 digits of your phone number.

▶ TEXT MESSAGING

Sending a text to a cell phone :

1. Select **“Menu” > “Messages” > “Create Message”**.

2. Type your 160-character message.

3. To send the text select **“Options” > “Send” > “Add”**.

4. Select a stored phonebook number or enter a new number.

**You must be outside and “Registered”
to send and receive messages .**

Sending a text to an email address :

1. Compose your text starting with the email address you wish to send it to. *For example: “email@domain.com having a great time!”*

2. When you select **“Send”** and it prompts you for a destination number, enter 00*2 then press the OK key.

3. If the phone successfully sends the message it will display **“Message Sent”**

**Receiving an SMS message on your Iridium
satellite phone is free. Replying to that message
will be charged at your normal SMS rate.**

▶ SENDING A TEXT MESSAGE TO A SATELLITE PHONE

Using the online messaging portal :

1. Go to <http://messaging.iridium.com/>

2. Enter the satellite number into the **“To”** field

3. Enter a reply email so the replies go to your email inbox

4. Enter your text in the message field and click **“Send Message”**

Sending a text from an email :

Send an email to : 8816____@msg.iridium.com

(Example: 881612345678@msg.iridium.com)

**Remember to keep your character
count below 160 characters.**